



019.202 MERLIN GOLD C6 CATERING DESCALER

HOW TO USE GUIDE



Process Time
± 40mins

- 1** TURN OFF AUTOMATIC CHEMICAL DISPENSING SYSTEM (SWITCH SHOULD BE LOCATED AT BOTTOM OF DISPENSING UNIT).
- 2** COMPLETELY DRAIN THE DISH/GLASS WASH MACHINE.
- 3** REFILL THE DISH/GLASS WASH MACHINE WITH FRESH, CLEAN WATER.
- 4** ADD 1 LITRE OF MERLIN GOLD C6 CATERING DESCALER.
- 5** TURN DISH/GLASS WASH MACHINE ON AND ALLOW TO CONTINUOUSLY WASH FOR A MINIMUM OF 10 MINUTES. TURN DISH/GLASS WASH MACHINE OFF AND CHECK DESCALING ACTION. IF NECESSARY, ADD ANOTHER LITRE OF MERLIN GOLD C6 CATERING DESCALER AND RUN THE DISH/GLASS WASH MACHINE FOR ANOTHER 10 MINUTES.
- 6** TURN DISH/GLASS WASHMACHINE OFF AND DRAIN COMPLETELY.
- 7** REFILL THE DISH/GLASS WASH MACHINE WITH FRESH CLEAN WATER AND ALLOW TO CONTINUOUSLY WASH FOR 5 MINUTES. AT THE END OF THE 5 MINUTES CYCLE, TURN THE DISH/GLASS WASH MACHINE OFF AND DRAIN COMPLETELY.
- 8** OPEN THE DOOR AND INSPECT THE WASHING AREA. CLEAN DETERGENT SENSOR WITH A SCOURER. NOW YOU MAY SWITCH THE AUTOMATIC CHEMICAL DISPENSING SYSTEM BACK ON.
- 9** NOTE: ENSURE THAT THE AUTOMATIC CHEMICAL DISPENSING SYSTEM IS SWITCHED OFF THROUGHOUT STEPS 1 - 8.